


# ISTRUZIONI PER APERTURA FORI RUBINETTERIA DIAFRAMMATI

c e r a m i c a  
**GLOBO**



On the upper level of the tap mark the centre of the hole from the wash-hand basin side as taken from the measurement on the technical specification.

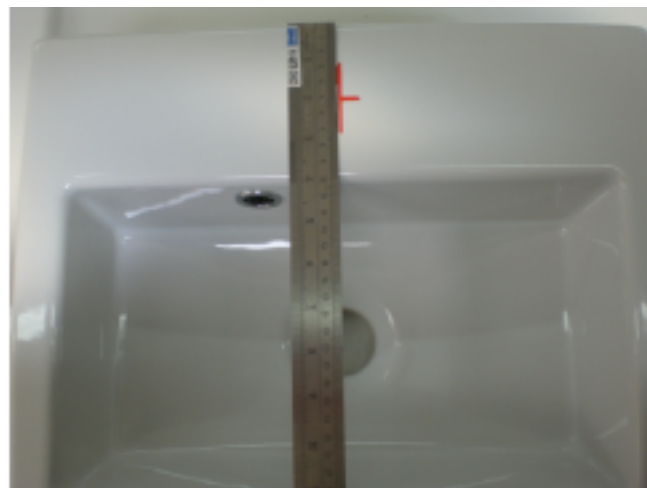

On the upper level of the tap mark the centre of the hole from the rear of wash-hand basin as taken from the measurement on the technical specification.



Mark the centre of the hole exactly intersecting the lines.



At this point strike the ceramic in the centre of the hole a number of time with a pointed hammer.



Continue to strike until a small hole is created in the upper part while in the lower part the ceramic disc has completely cleared.



Continue opening the hole giving some gentle strikes to widen the existing hole rotating around the hole to reach a diameter of 35 mm.